
DRILL 13/8" (35MM)HOLE FOR FAUCET

• You will need to use or drill a 1 ³/₈" (35mm) diameter hole in the counter-top or sink where you would like to place the faucet.



FAUCET FITTING KIT FOR DISPENSER

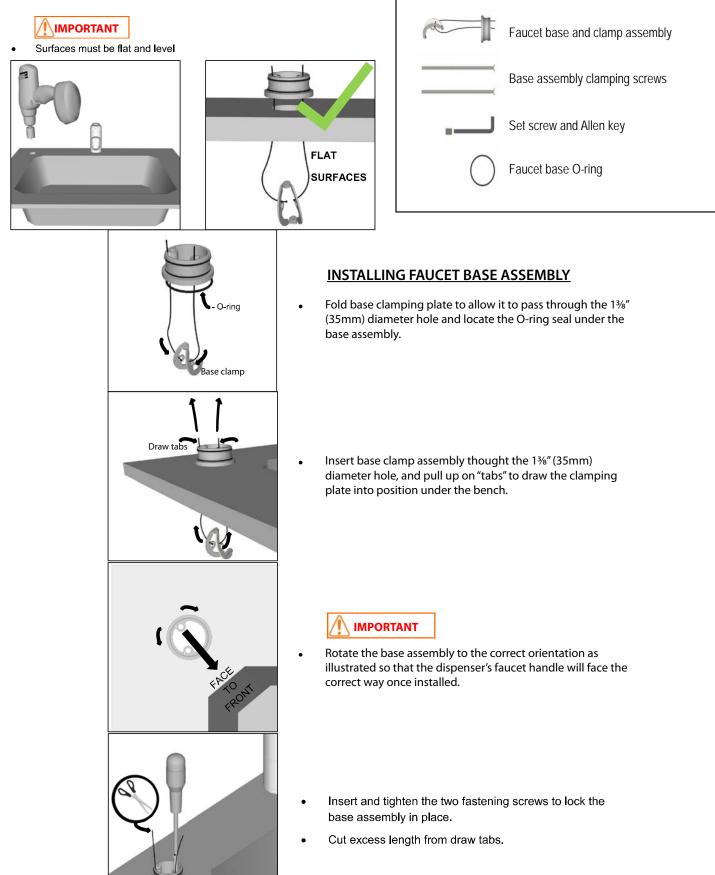



Faucet Image Representational

INSTALLING FAUCET TO DISPENSER


 Insert tubing through the base assembly as illustrated, and lower the faucet base into position.

/ IMPORTANT

- •Take care not to damage or kink the tubing as it passes through the base assembly.
- •Do not pull on the tubing in an effort to locate the dispenser faucet onto the base assembly.
- Insert and tighten set screw on faucet base using supplied Allen wrench.

MOUNTING TANK


- Position tank vertically beneath faucet so that the flexible tube from the faucet reaches the center faucet supply tube on the tank. Keep the tank .39"(10mm) away from the wall.
- NOTE: The tank must be positioned so the hose to the faucet does not twist or kink.

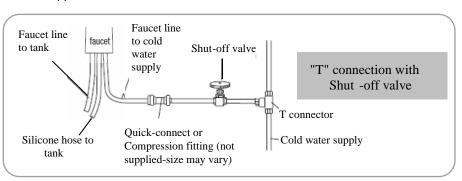

CONNECT FAUCET TO TANK

Connect ¹/4" (6.4mm) faucet inlet line to the rear tube at the top corner of the tank with the quick-connect fitting supplied with the appliance. Push line straight into quick-connect fitting as far as possible for both connections. Connect silicone tube to the center outlet tube on top of tank. Use cable ties to fix the connection tightly. It will create a secure connection when properly installed. Be sure the hose is not twisted or kinked. Hose may be shortened if necessary.

NOTE: DO NOT lengthen the hose - dispenser performance will be impaired and warranty will be void.

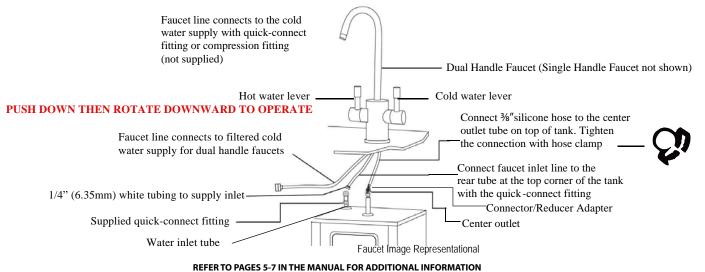

OPERATION

Single Faucet (Hot Only)

First depress lever by pushing down, then rotate lever forward to dispense hot water. While depressed and in the down position, hot water will dispense from the faucet. Return lever to upright "off" position to discontinue dispensing of water.

Dual Faucet (Cold and Hot)

Cold (blue dot on lever) – Rotate lever forward to dispense cold water. Return lever to upright "off" position to discontinue dispensing of water. **Hot (red dot on lever)** – First depress lever by pushing down, then rotate lever forward to dispense hot water. While depressed and in the down position, hot water will dispense from the faucet. **Note:** As a safety precaution the hot lever will not work unless depressed. If user tries to move the lever back and forth without depressing the lever, the lever will remain stationary and will not dispense hot water. To discontinue dispensing of hot water, return lever to upright "off" position.

Take care before operating that no part of your body is in-line with the hot water stream to avoid injury.